

INVICTA TECHNICAL FILE

OPERATION, MAINTENANCE, & HEALTH AND SAFETY INSTRUCTIONS

PRODUCT RANGE/FORK MOUNTED CARPET POLE

Operation

1. Position the forks the correct distance apart to locate into fork pockets.
2. Remove fork pocket heel pins from fork pockets.
3. Drive forks into the fork pockets.
4. Insert fork pocket heel pins directly behind heel of fork and attach safety lynch pin into hole provided.
5. The attachment is now ready for use.

Maintenance

1. The Fork Mounted Carpet Pole should be inspected weekly for general condition with particular attention paid to:
 - A – All weld points.
 - B – Wear and distortion of fork pockets and heel pin attachments.
 - C – Any damaged components.
 - D – Pole alignment
2. Damage or failure must be reported or rectified immediately prior re-use of Fork Mounted Carpet Pole.
3. General surface rusting especially in critical areas should be treated with proprietary inhibitors, primers and paint on a regular basis.
4. This product is certified for twelve (12) months from the date of manufacture after which it is the customer's responsibility to have the product re-tested at an approved testing facility or inspected and logged in a register by a competent person as advised by the HSE.

Health and Safety

1. The manager of the department or section where the attachment is to be used must be responsible for ensuring the operators are fully conversant with the attachment, its operation, maintenance and that the heel pins are fitted correctly.
2. Ensure both the truck and attachments are capable of handling the intended load and its contents.
3. Do not drive into the fork pockets without removing the heel pins.
4. Ensure that the heel pins are correctly inserted, retained and positioned in relation to the heel of the fork prior to each and every use.
5. Ensure the attachment is level when entering the carpet core.
6. Do not shock load the attachment under any circumstances.
7. The safe working load must not be exceeded at its load centre.
8. Always fully insert the effective length of the pole down the carpet core. Do not tip load.

The Operator should ensure that the above product is used for the purpose that it has been designed, tested and intended to do and no deviation to this occurs. If in doubt, consult your fork truck dealer or approved attachment supplier.